

CURRENT TIME AND DATE

To Set Up The Current Date:

1. Press "SET"
2. The screen will display "C MONTH, DATE, YEAR"
3. Press M1 (if M1 is not pressed in 5 seconds, the screen will go back to the normal screen)
4. The screen will flash for YEAR. Press SET to update to the current year. Holding down the SET button will cycle through the numbers faster. Press M1 to confirm.
5. The screen will flash for MONTH. Press SET to update to the current month. Holding down the SET button will cycle through the numbers faster. Press M1 to confirm.
6. The screen will flash for DATE. Press SET to update to the current date. Holding down the SET button will cycle through the numbers faster. Press M1 to confirm.
7. The screen will flash for HOURS. Press SET to update. The "A" or "P" will change as you cycle through AM or PM. Press M1 to confirm.

8. The screen will flash for MINUTES. Press SET to update. Press M1 to confirm.

FINAL TIME AND DATE (2013 PRESIDENTIAL INAUGURATION)

To Set Up The Date to Countdown To:

1. Press "SET"
2. Press M2
3. The screen will display "F MONTH, DATE, YEAR"
4. Press "SET"
5. The screen will flash for YEAR. Press SET to update to the current year. Holding down the SET button will cycle through the numbers faster. Press M2 to confirm.
6. The screen will flash for MONTH. Press SET to update to the current month. Holding down the SET button will cycle through the numbers faster. Press M2 to confirm
7. The screen will flash for DATE. Press SET to update to the current date. Holding down the SET button will cycle through the numbers faster. Press M2 to confirm.

8. The screen will flash for HOURS. Press SET to update. The "A" or "P" will change as you cycle through AM or PM. Press M2 to confirm.
9. The screen will flash for MINUTES. Press SET to update. Press M2 to confirm.

Remarks:

1. Default: 05-01-2010-change this to your current Time and date
2. Range for countdown: your current time and date to 01-20-2013
3. Power consumption: 3x LR44 batteries for clock; 1x CR2032 battery for memory function
4. 1xCR2032 battery will be used to keep the memory and can automatically start at the present time when 3XLR44 batteries have run out.
5. Remove batteries if they no longer work or product is to be left unused for a long time.
6. Attention the used batteries must be discarded in proper place to avoid pollution.